

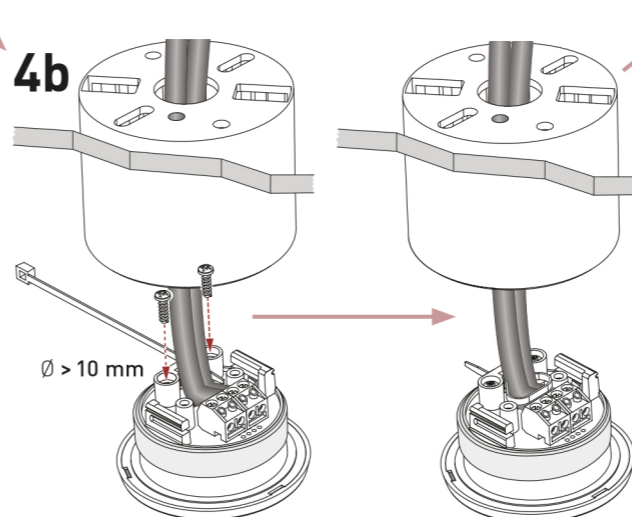
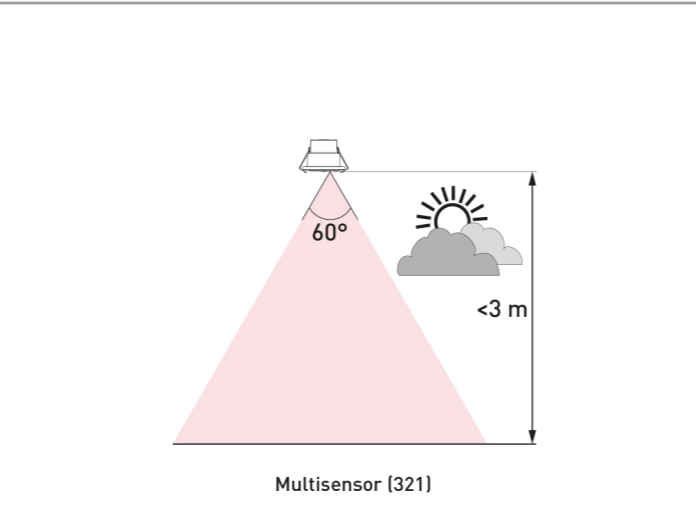
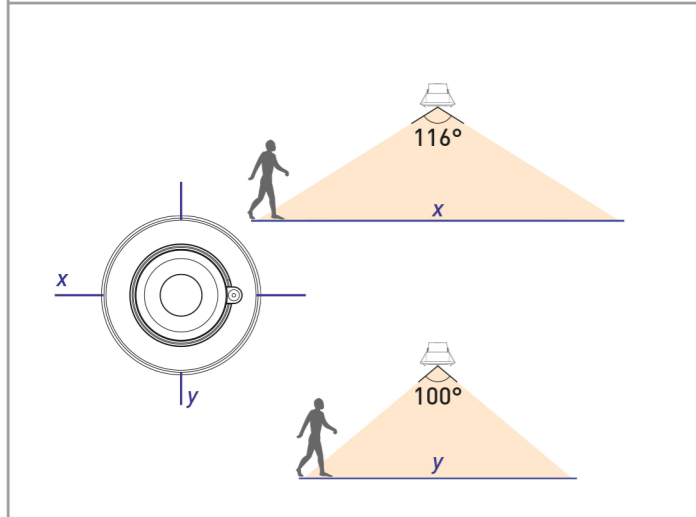
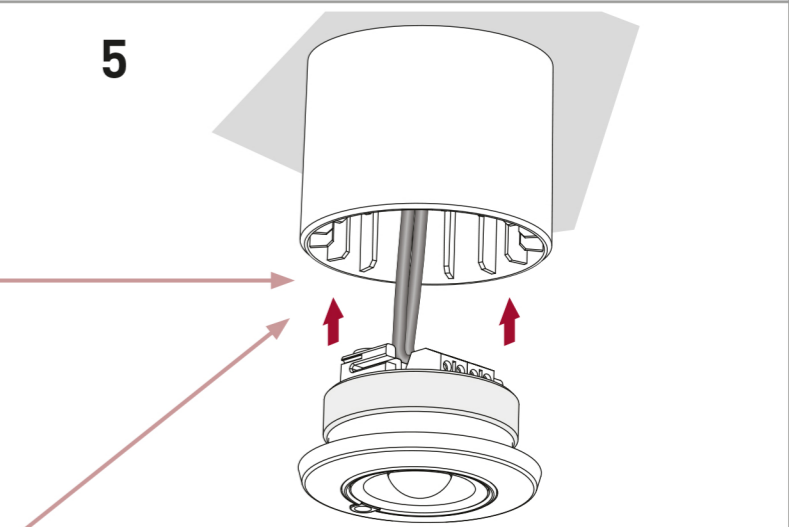
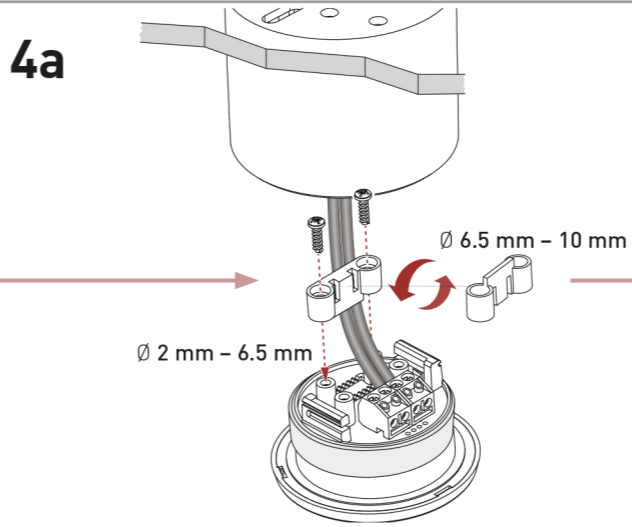
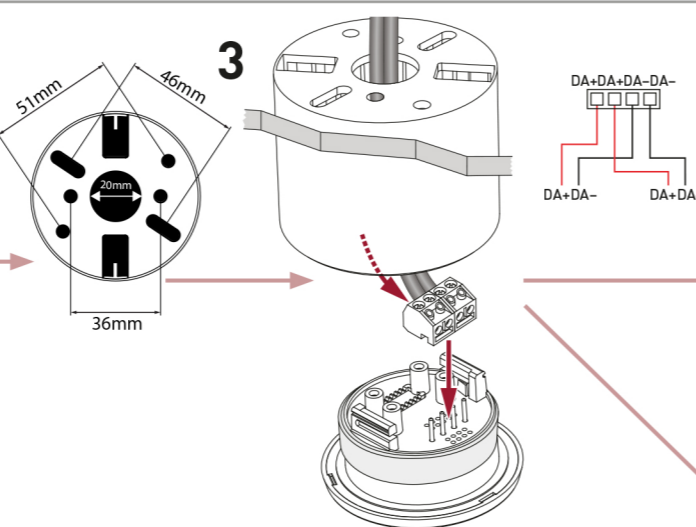
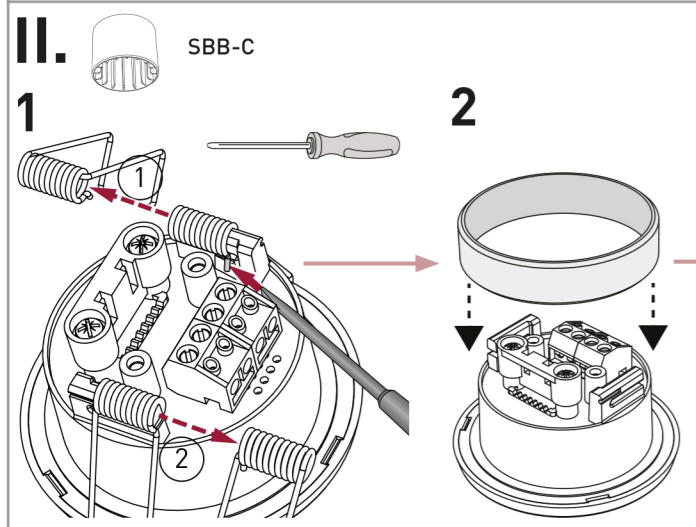
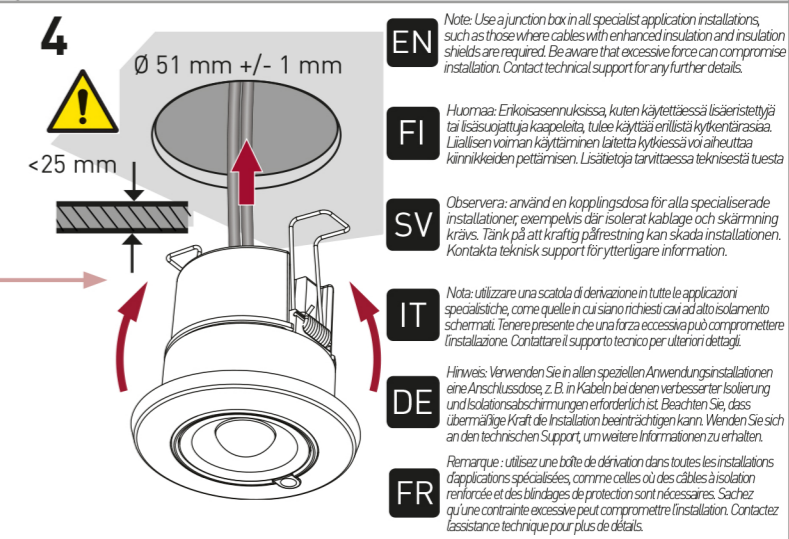
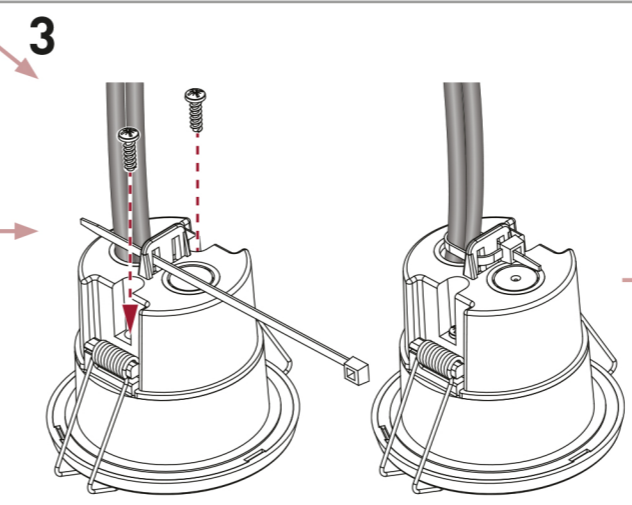
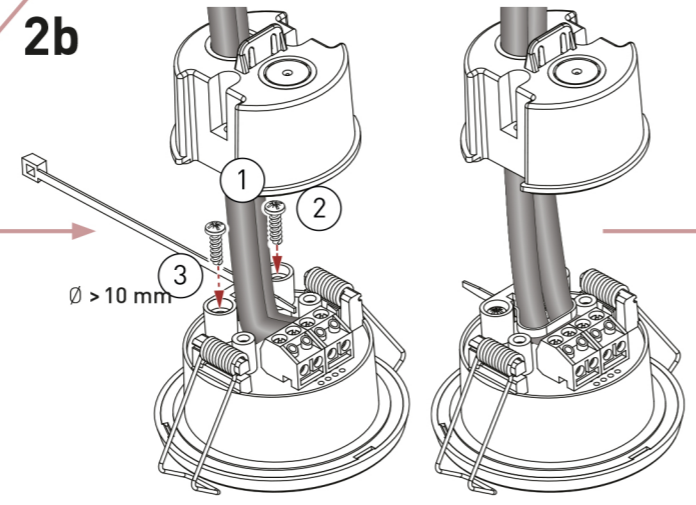
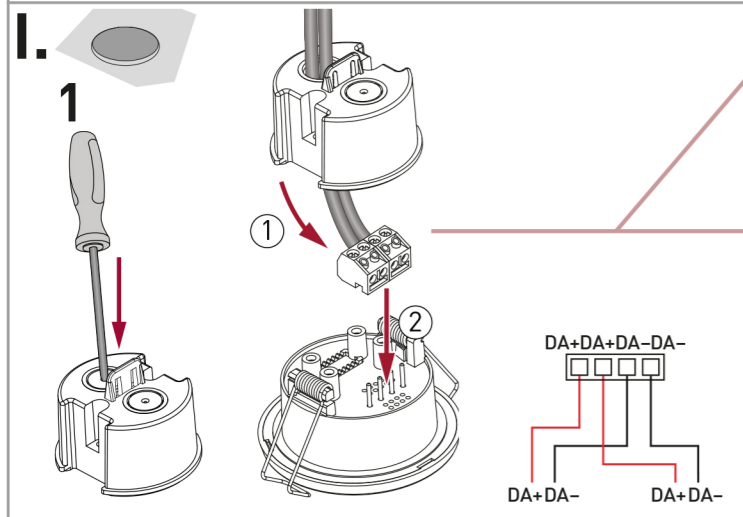


**PIR Sensor (320, 320B, 320D2, 320BD2)
Multisensor (321, 321B, 321D2, 321BD2)**

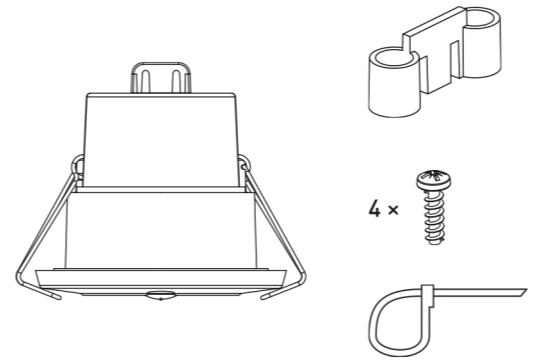

Installation Guide

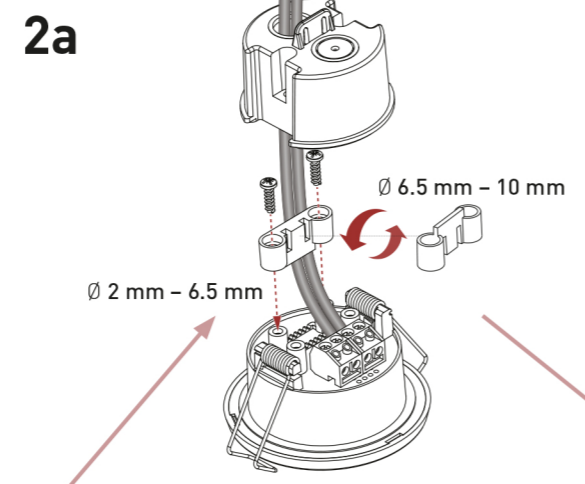

- FI** Liiketunnistin (320, 320B, 320D2, 320BD2) & Multisensori (321, 321B, 321D2, 321BD2) Asennusohje
- SV** PIR Sensor (320, 320B, 320D2, 320BD2) & Multisensor(321, 321B, 321D2, 321BD2) Monteringsanvisning
- IT** Sensore PIR (320, 320B, 320D2, 320BD2) & Multisensore(321, 321B, 321D2, 321BD2) Guida all'installazione
- DE** PIR Sensor (320, 320B, 320D2, 320BD2) & Multisensor(321, 321B, 321D2, 321BD2) Installationsanweisung
- FR** PIR-Sensor (320, 320B, 320D2, 320BD2) & Multi-capteur (321, 321B, 321D2, 321BD2) Guide d'installation

